

## Foot Controls

### Accelerator (gas)

Right hand pedal - Operated by right foot - Controls fuel to engine

Requires only light pressure

### Brake

Centre pedal - Operated by right foot – Operates on all four wheels

Switches on rear brake lights

Progressive braking – Light pressure – Gradually press harder

Reduce pressure just before stopping

### Clutch

Left hand pedal - Operated by left foot – Connects the engine to the gearbox

Used when moving off changing gear, manoeuvring.

Pressed down fully & quickly, released slowly

Biting point – where the engine just starts to drive the car

### Dual Controls

Only used in an emergency

Handbrake/neutral before handing back control

Will explain why?