

## Hand Controls

### Parking Brake

Only use when stationary – Only operates on 2 wheels

Doesn't activate Brake lights – Press in ratchet when applying

Lift up and press in ratchet when releasing

### Gear Lever

Changes gear to match engine speed to road speed

Neutral – Middle position – Moves sideways – No drive – safe

Look ahead when changing gear

Palming Method – 1<sup>st</sup> – Most powerful – Moving off – Manoeuvre's

2<sup>nd</sup> & 3<sup>rd</sup> – Working gears – Traffic – Town

4<sup>th</sup> & 5<sup>th</sup> – Cruising gears

### Steering Wheel

Hold lightly 10 to 2 or ¼ to 3 Keep 2 hands on wheel Pull push method

DON'T cross hands Dry steering when car is stationary Avoid

### Indicators

On left hand side of steering column – Moves same way as Steering wheel

Orange lights front & back shows other road users of intentions

### Other Controls

Explained later